

Additional Device Connectivity

You can connect additional "Call Out Only" devices on the call processor with extended barge-in protection by using an Exclusivity Adapter as shown below. Only one, unit within the group can be enabled to receive inbound calls.

