



Example (Page 24 of Stick manual):

- Shows a 3-pair in house cable with 2 pairs used for incoming lines from Telco.

- Room B is office, location of STICK, where TELCO Line 1 and 2 are split using a splitter adapter, so Line 2 can be routed through the STICK.

- Voice 2 is connected, via answering machine, to the previously unused pair for distribution through the premises.

- Phones in Rooms A & C are moved to the previously unused pair, becoming connected through the STICK.

- STICK now controls ringing of all equipment in premises

- STICK can now answer on 0 "Ring To Answer" (default options). Phones will not ring on incoming "auto-faxes".

